




Remove locking headless screw

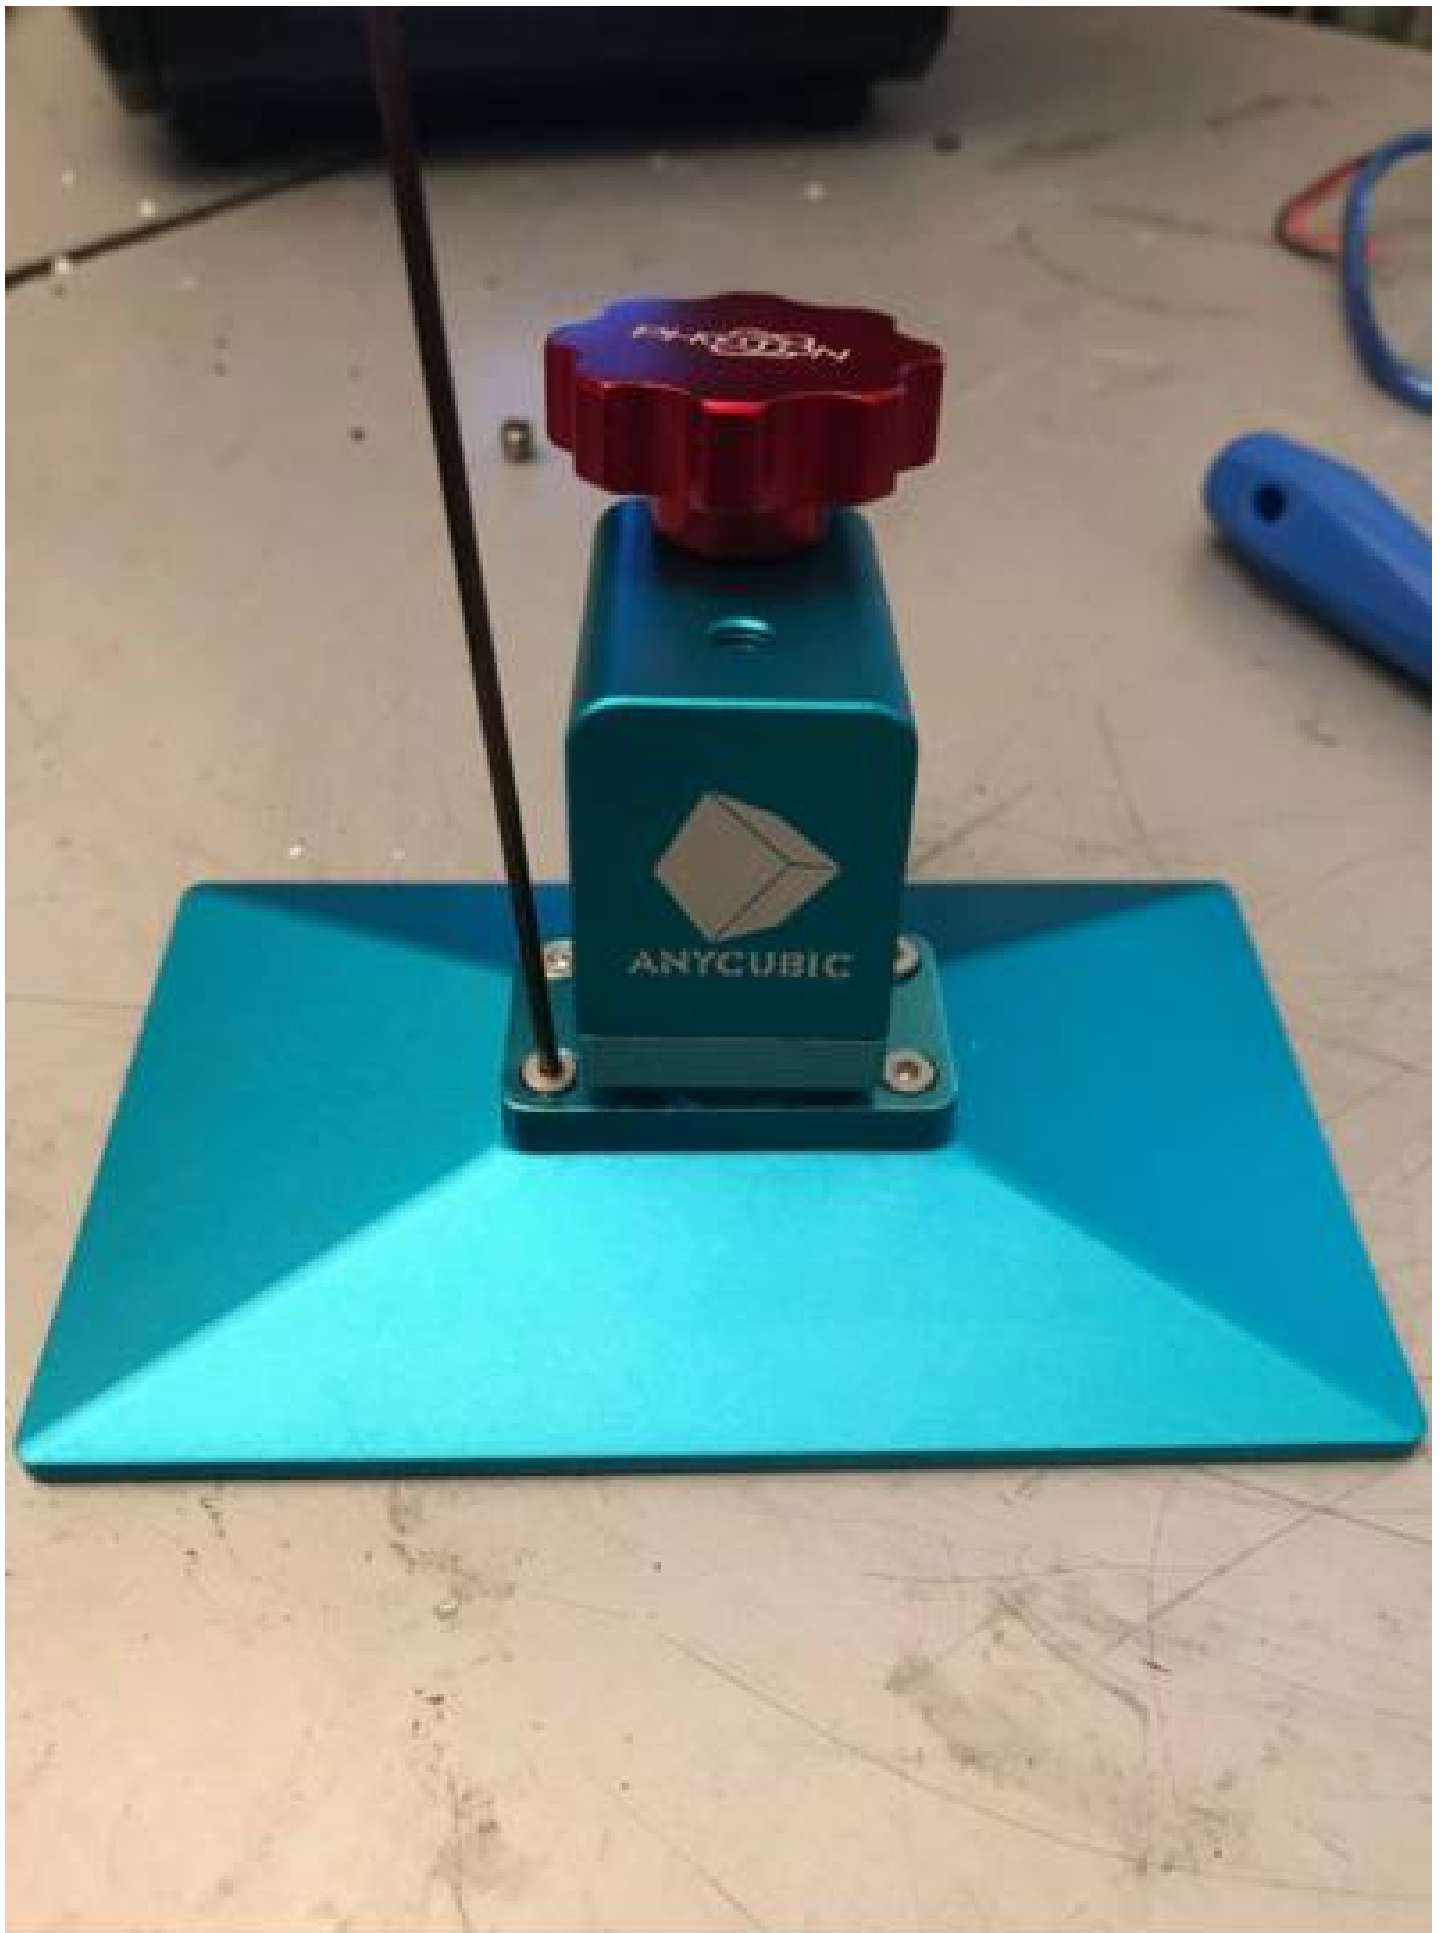

Remove platform

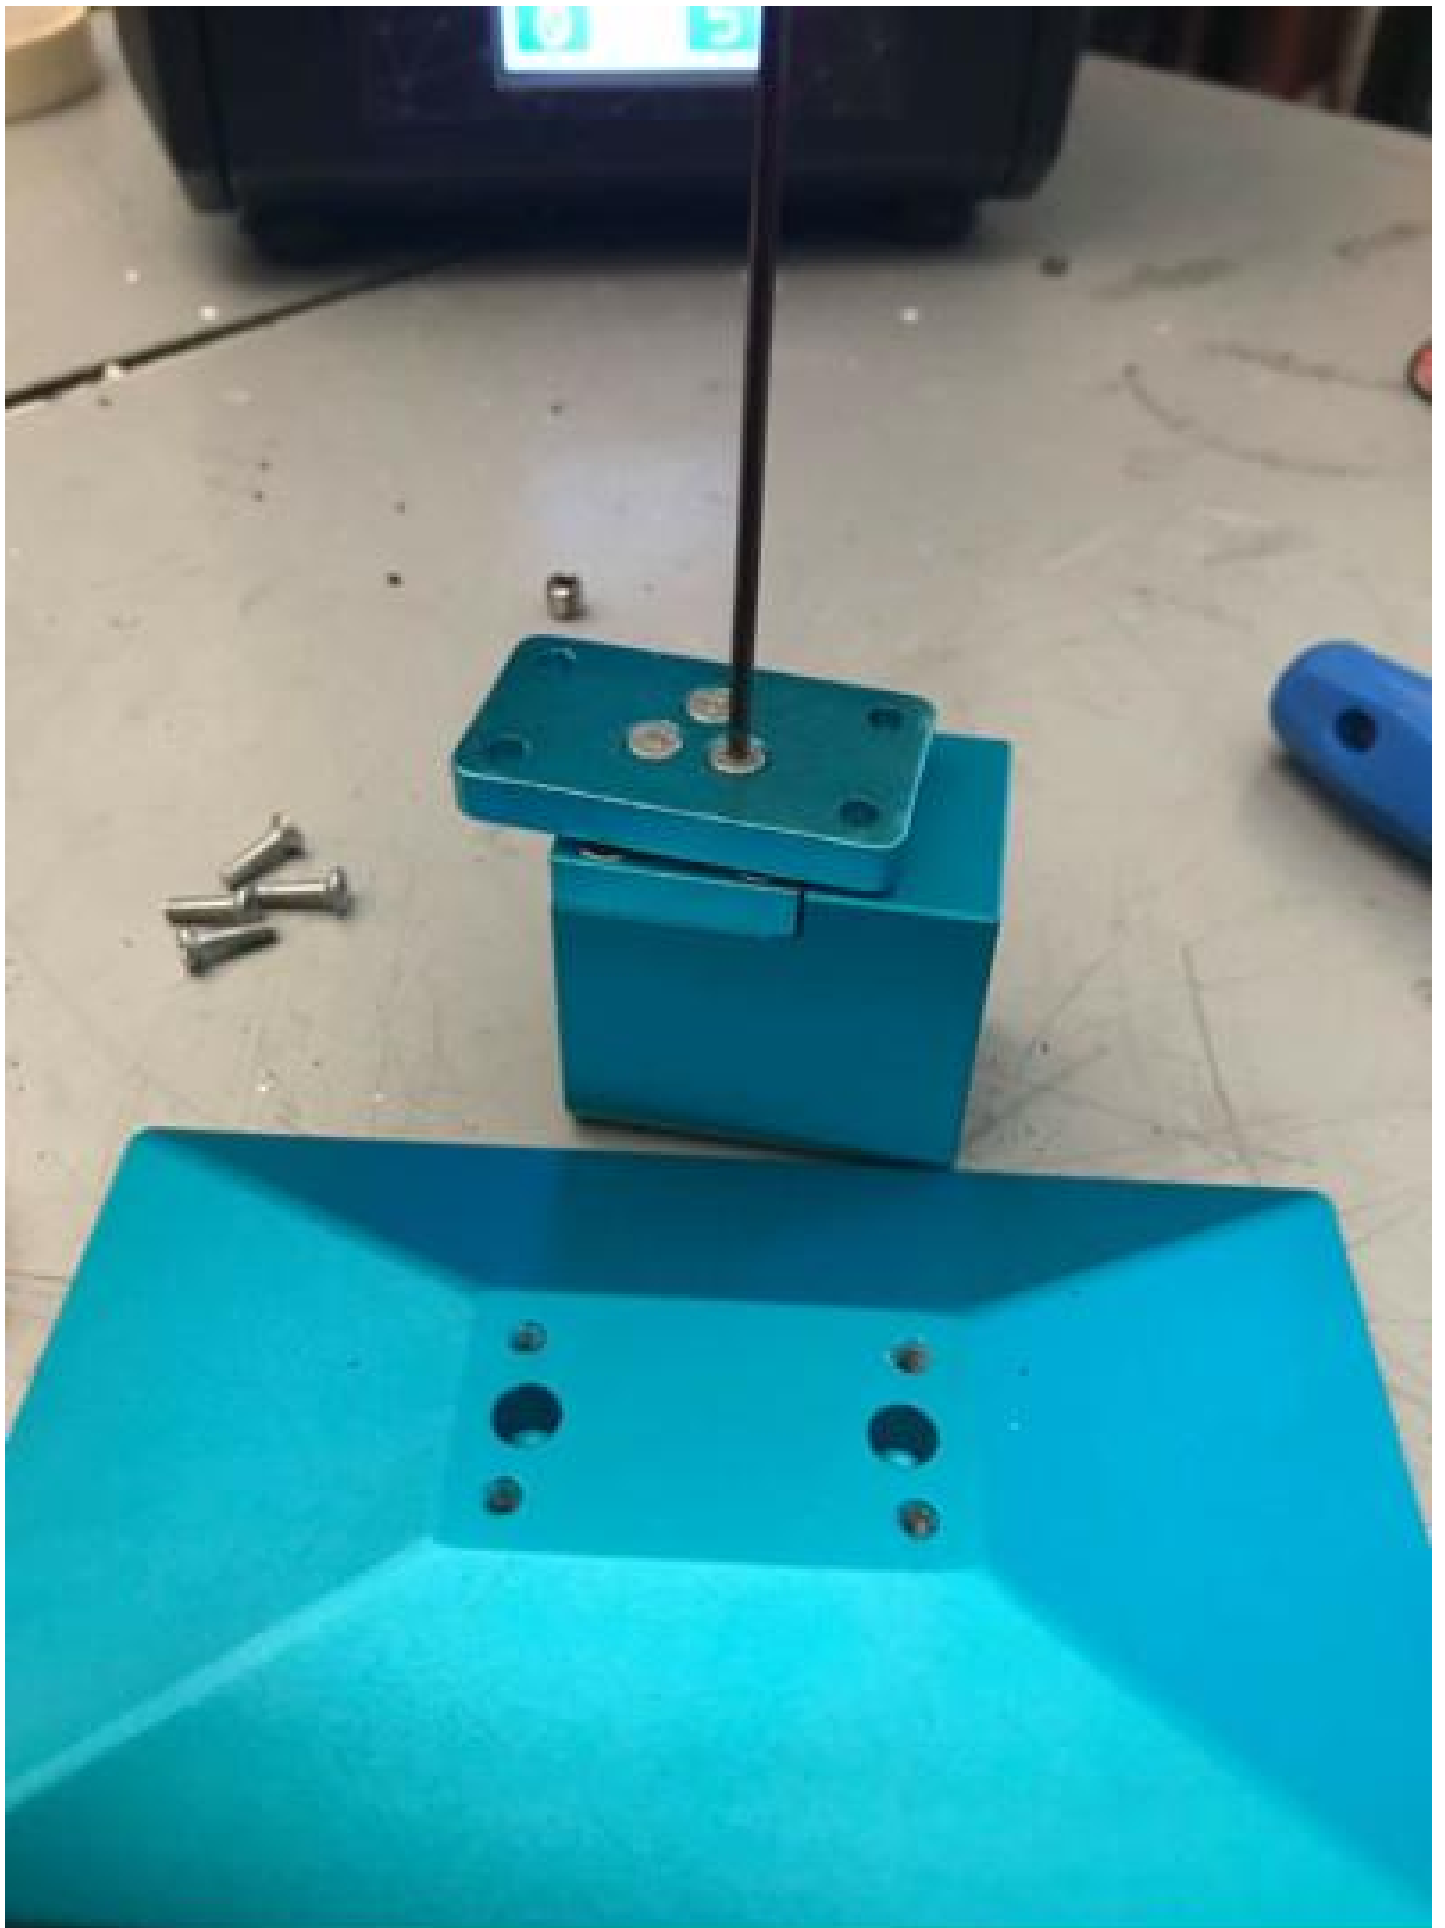


Remove platform holder

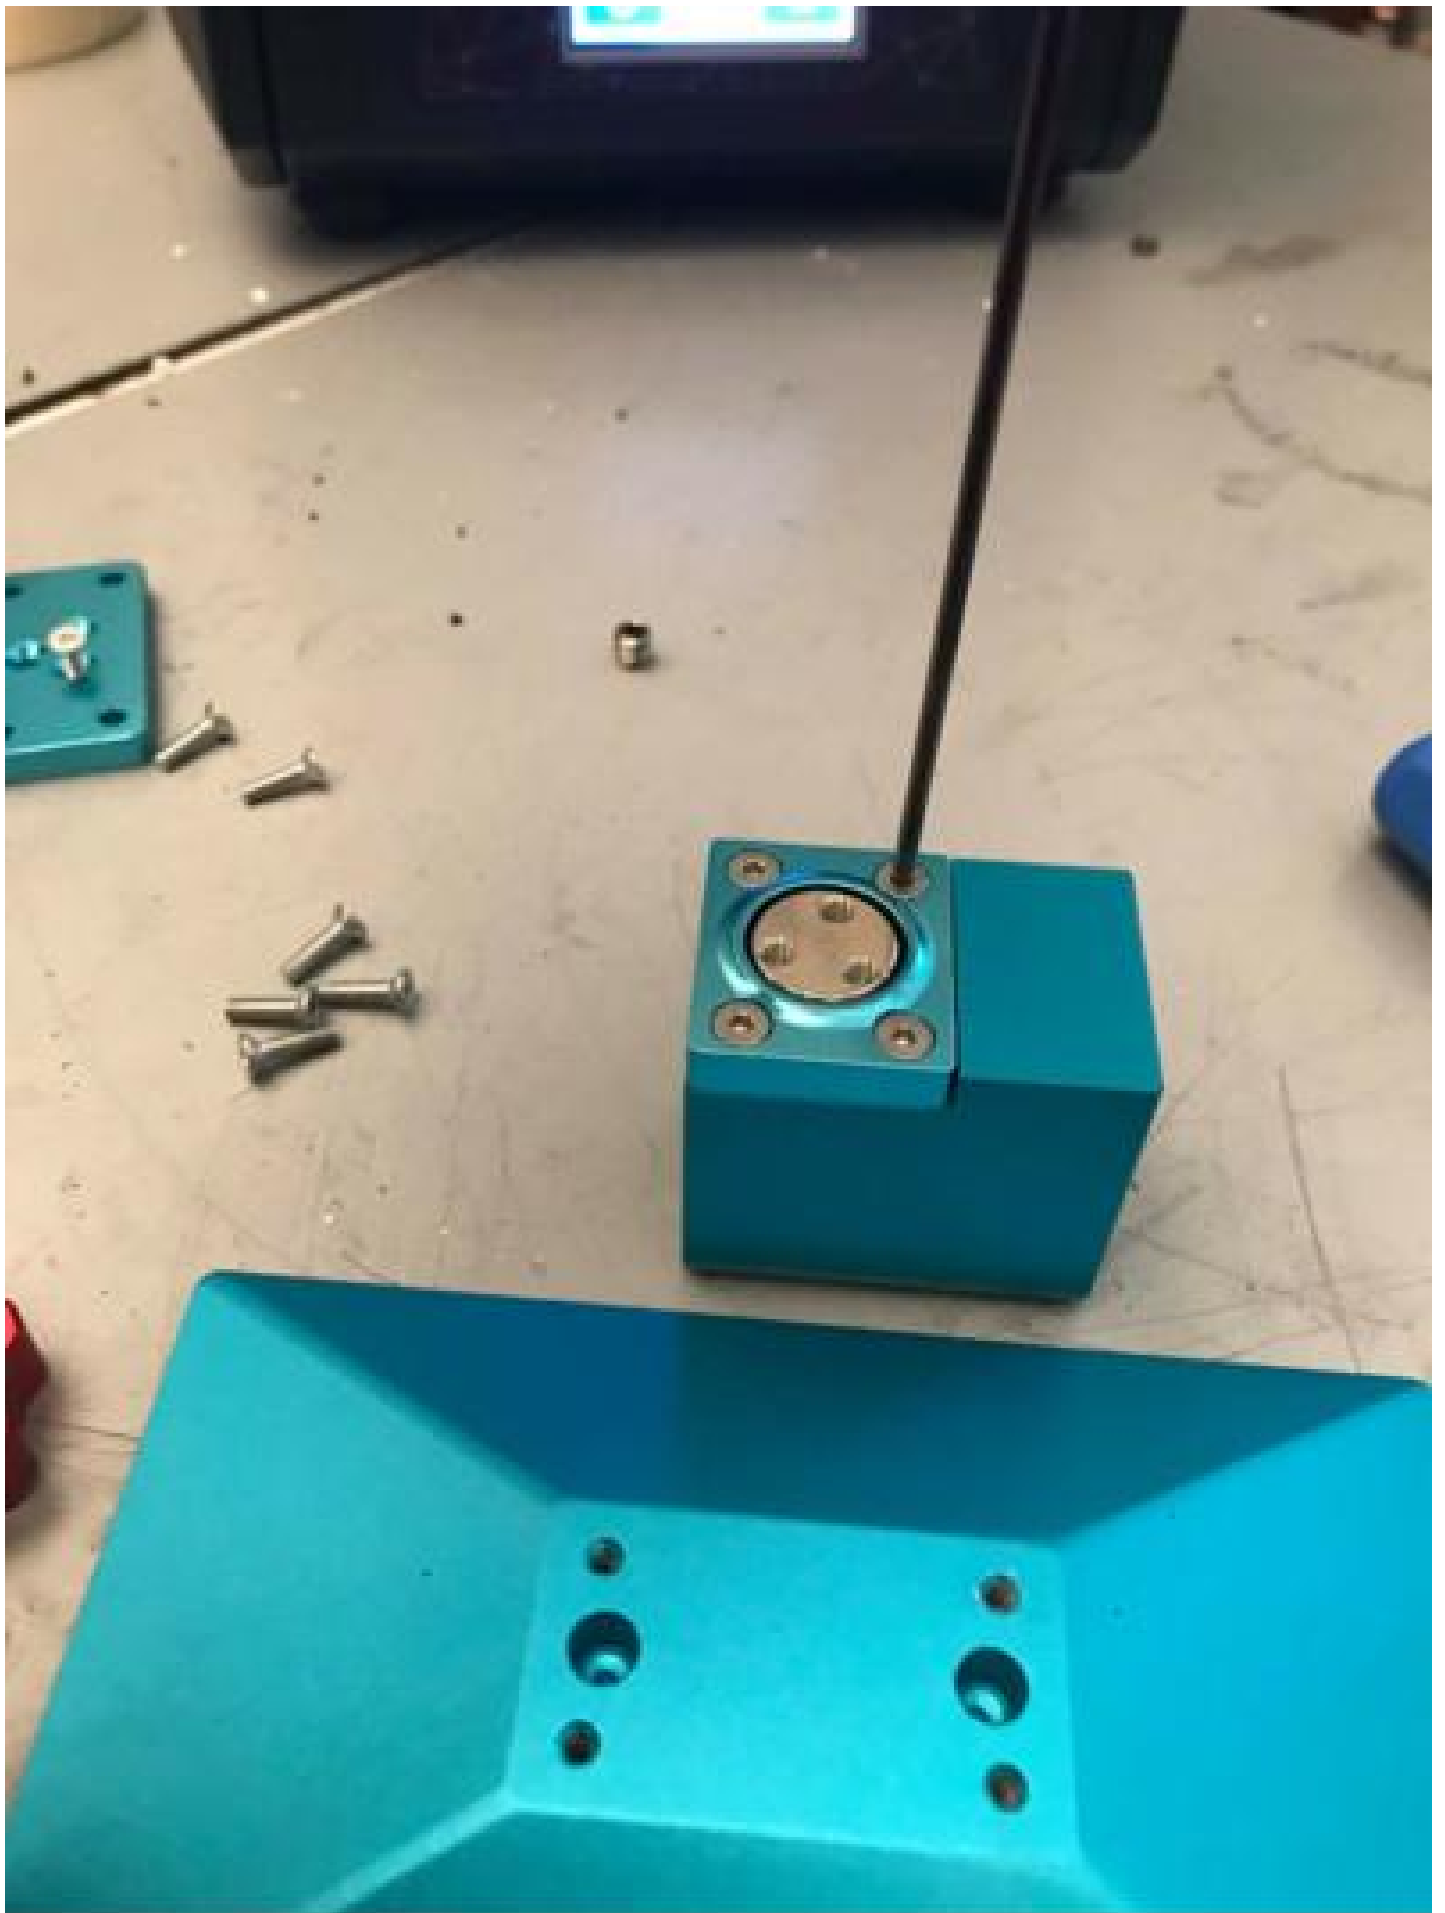


Remove ball housing



Put on EasyZ0

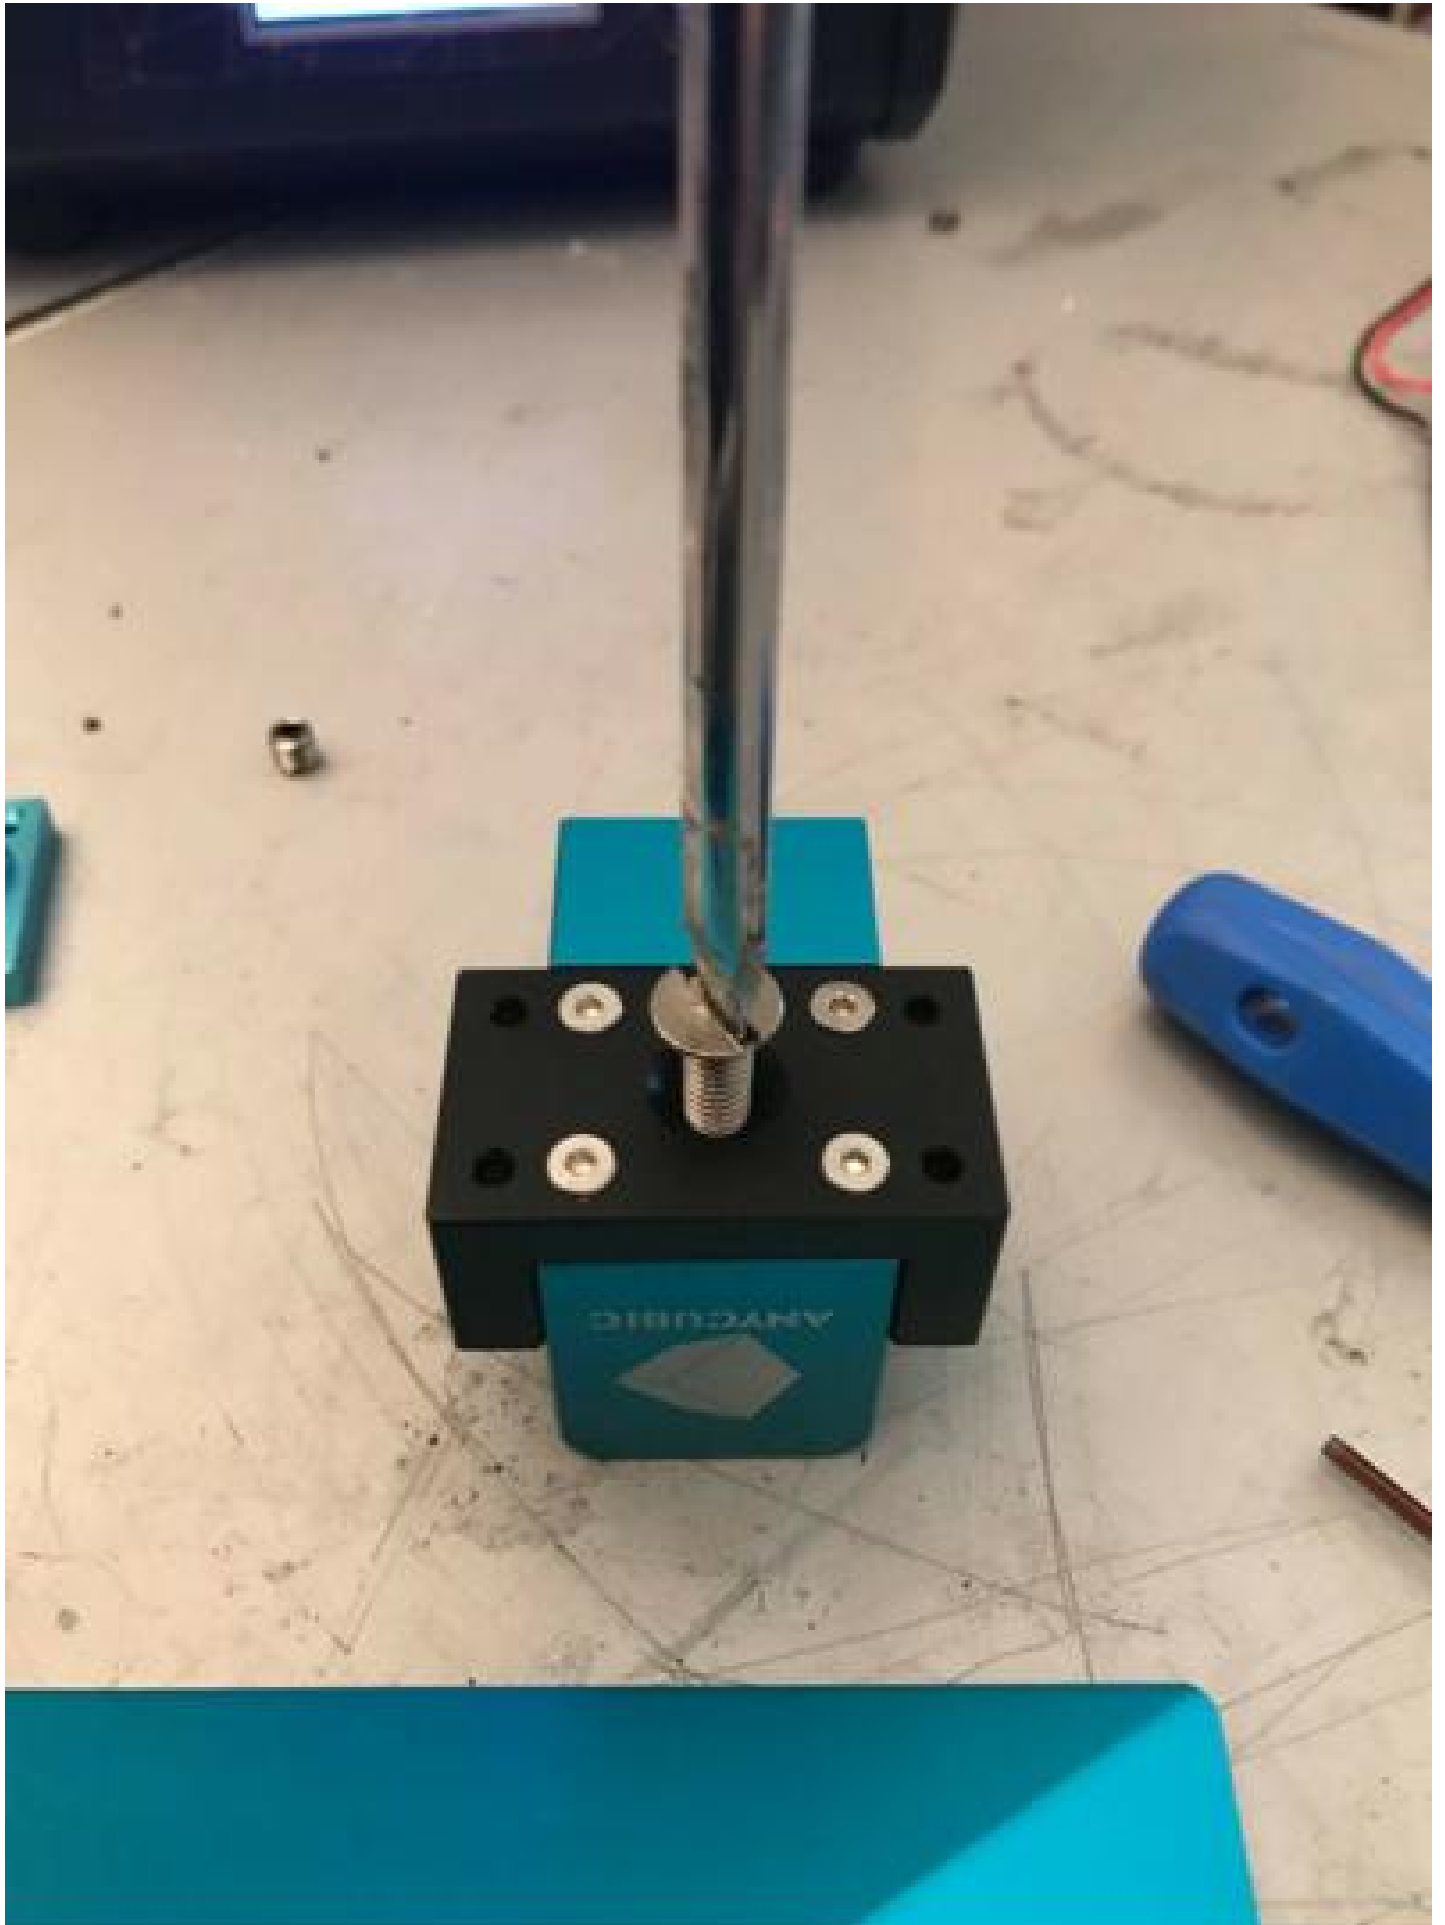

Put 4 m3 screws and one m6 (supplied into kit)

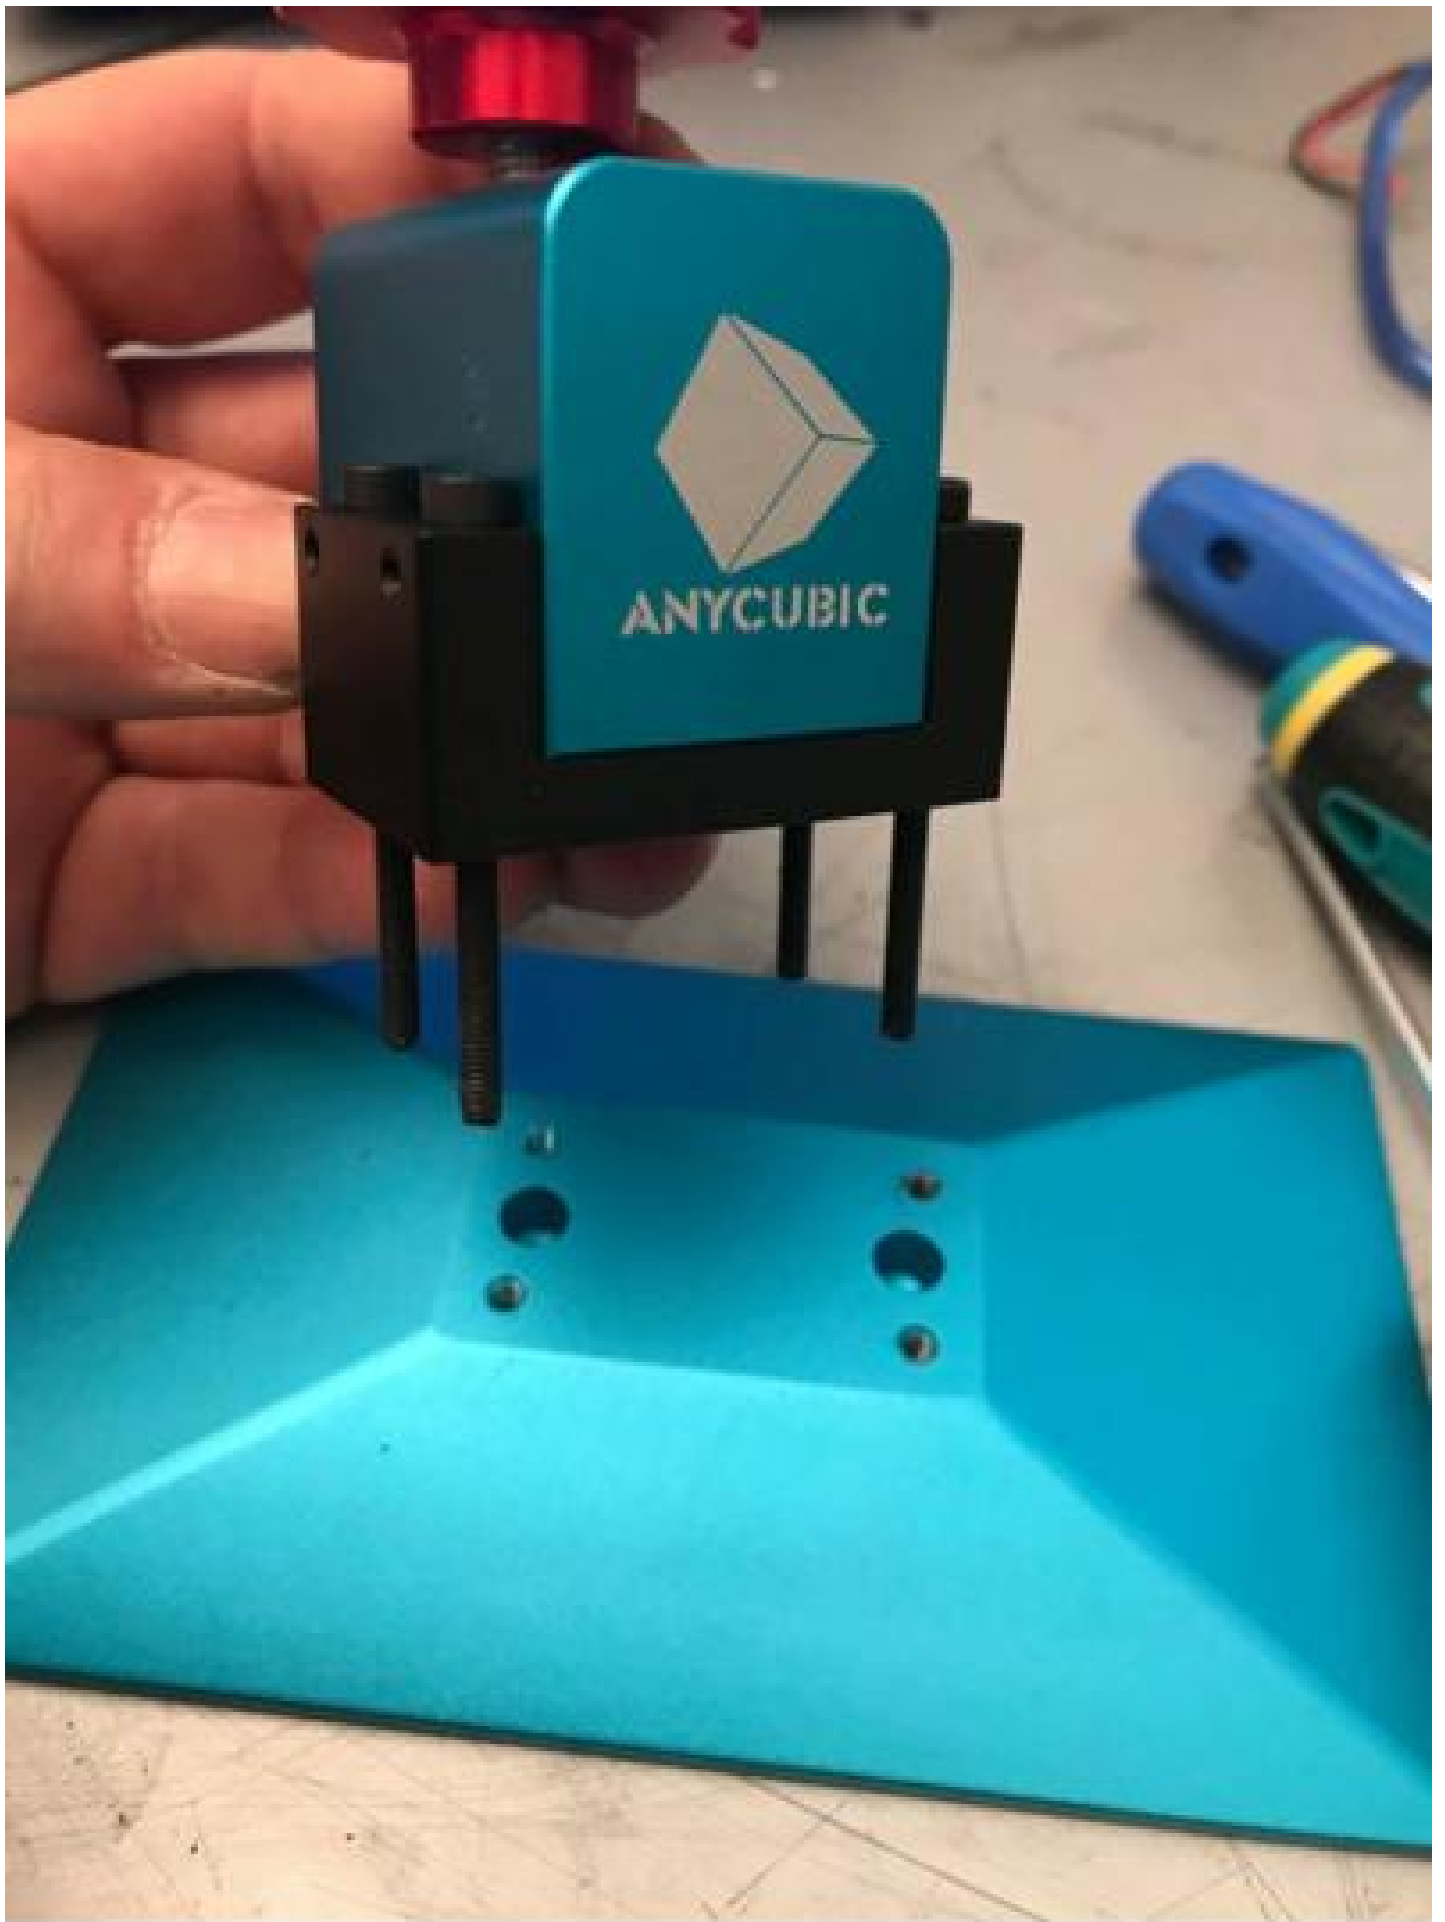

put 4 long m3 screws (supplied)



Tight them without excessive force






Put in place 4 m2.5 screws (supplied) WITHOUT CLOSING THEM, platform must be free to move!



Check platform is free



Put platform on printer and go HOME

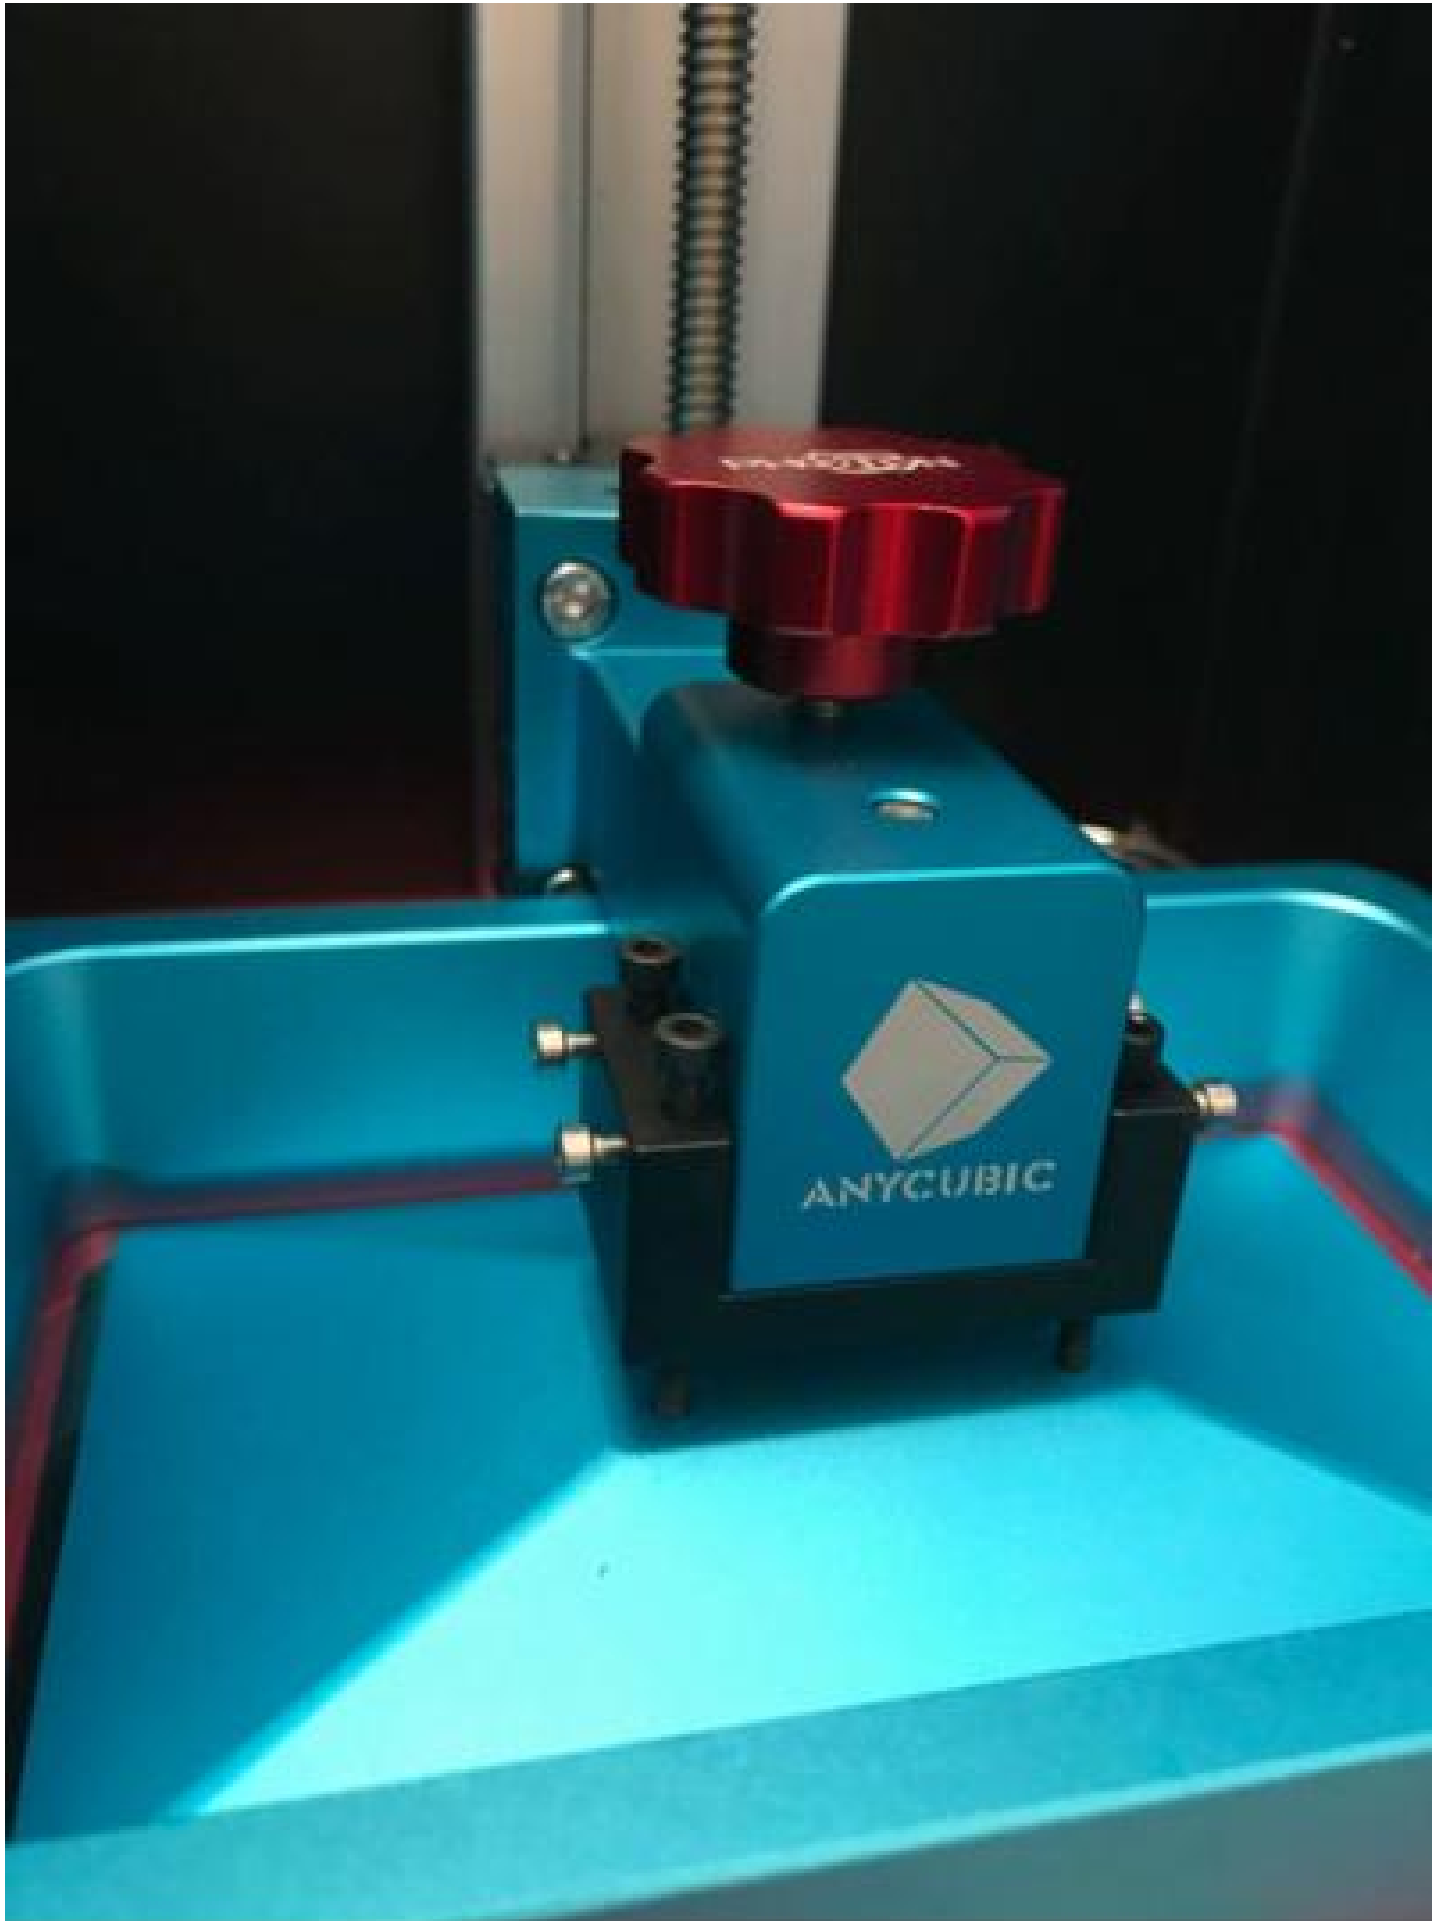


You will see platform touching




Set Z ZERO here (Home will be Z zero)



Confirm

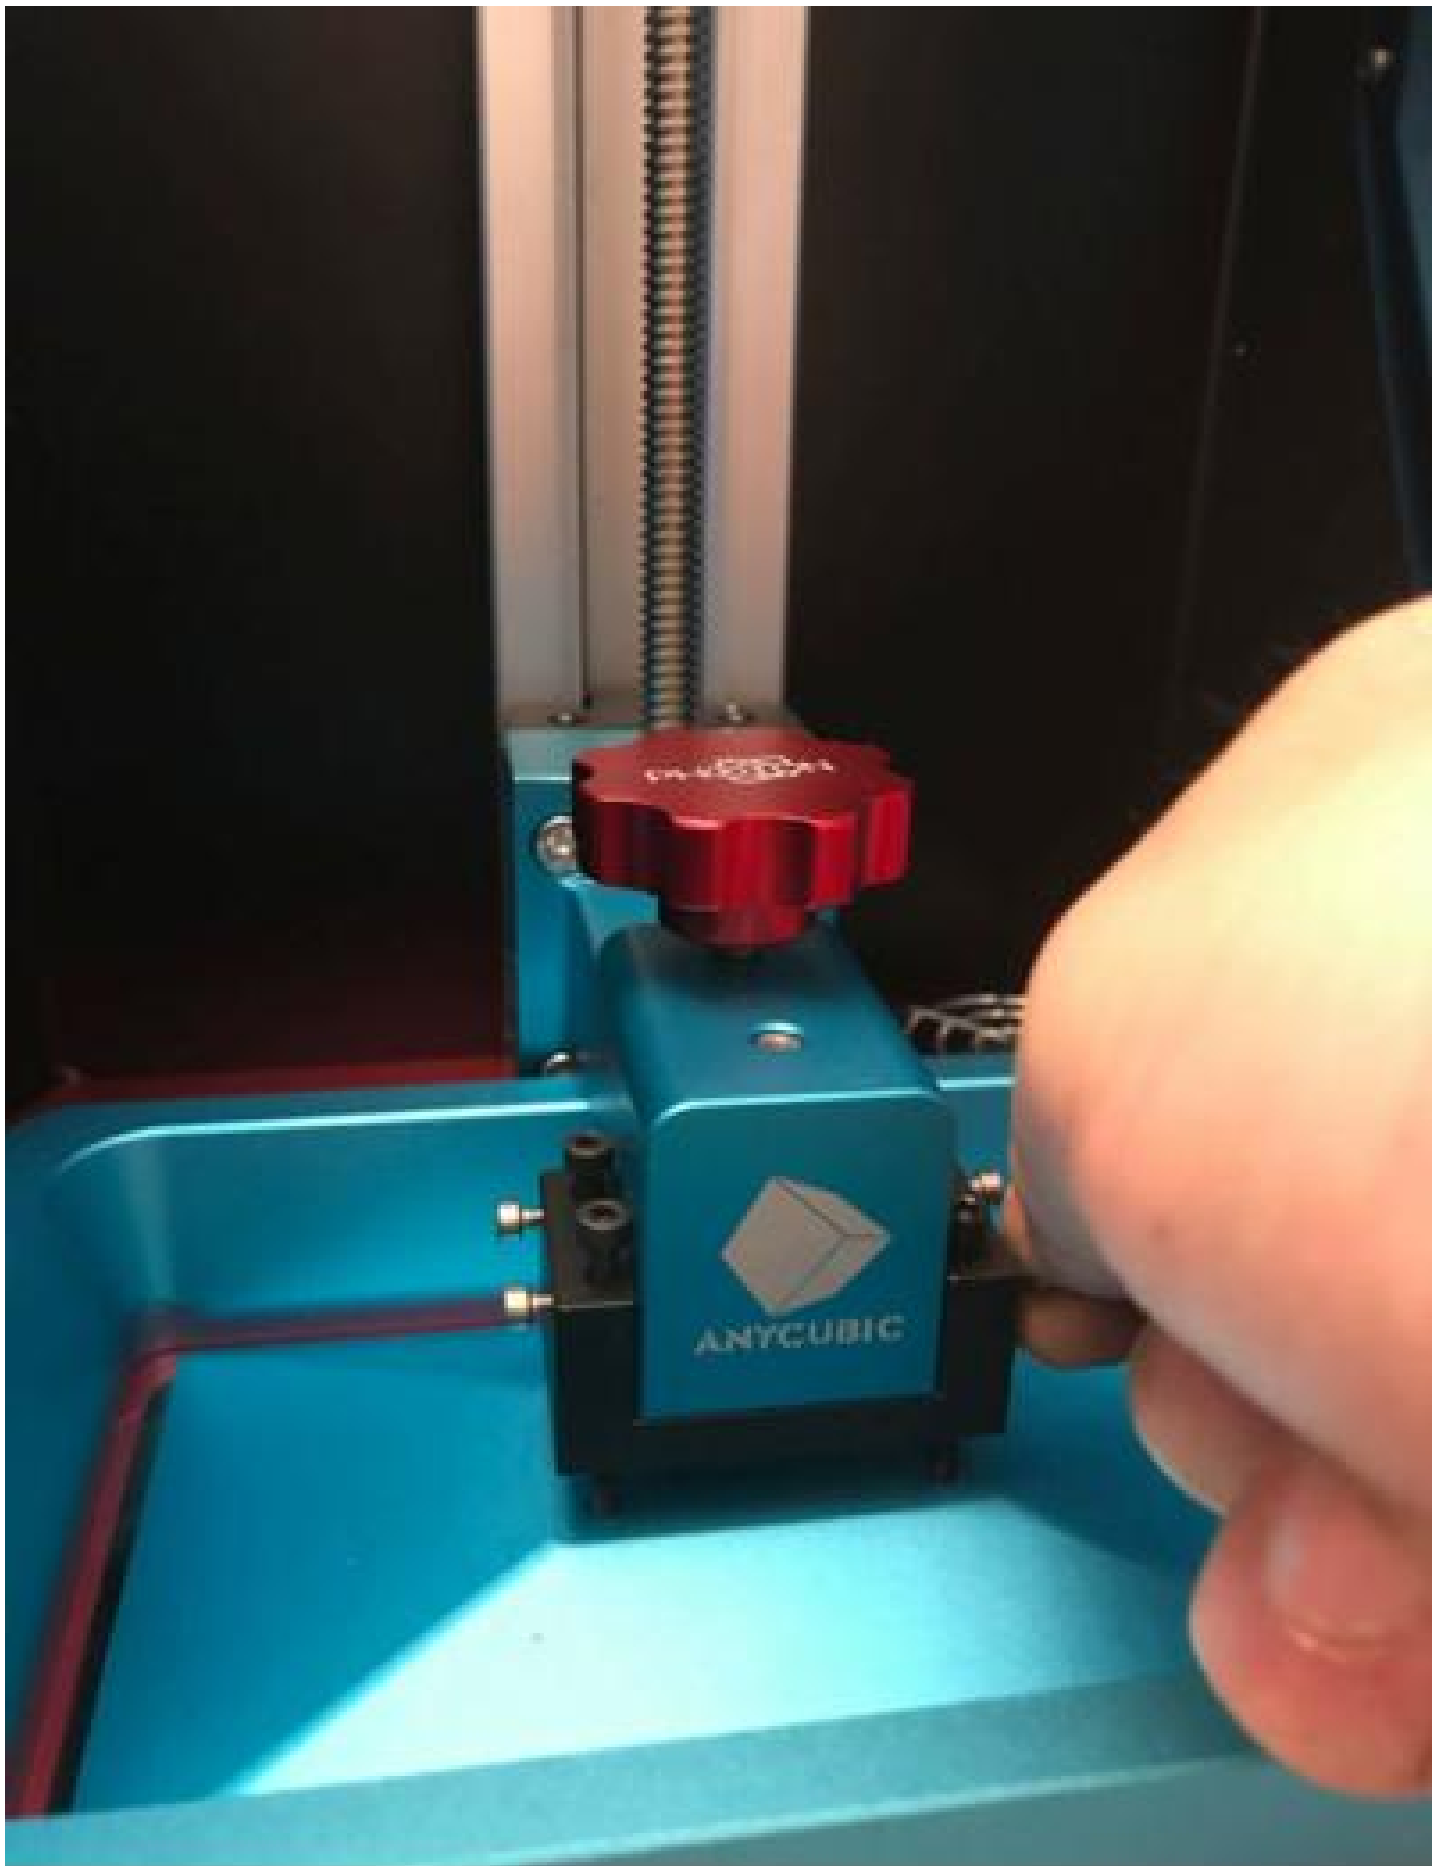

Tight by finger locking screws, best is to tight in crossed sequence

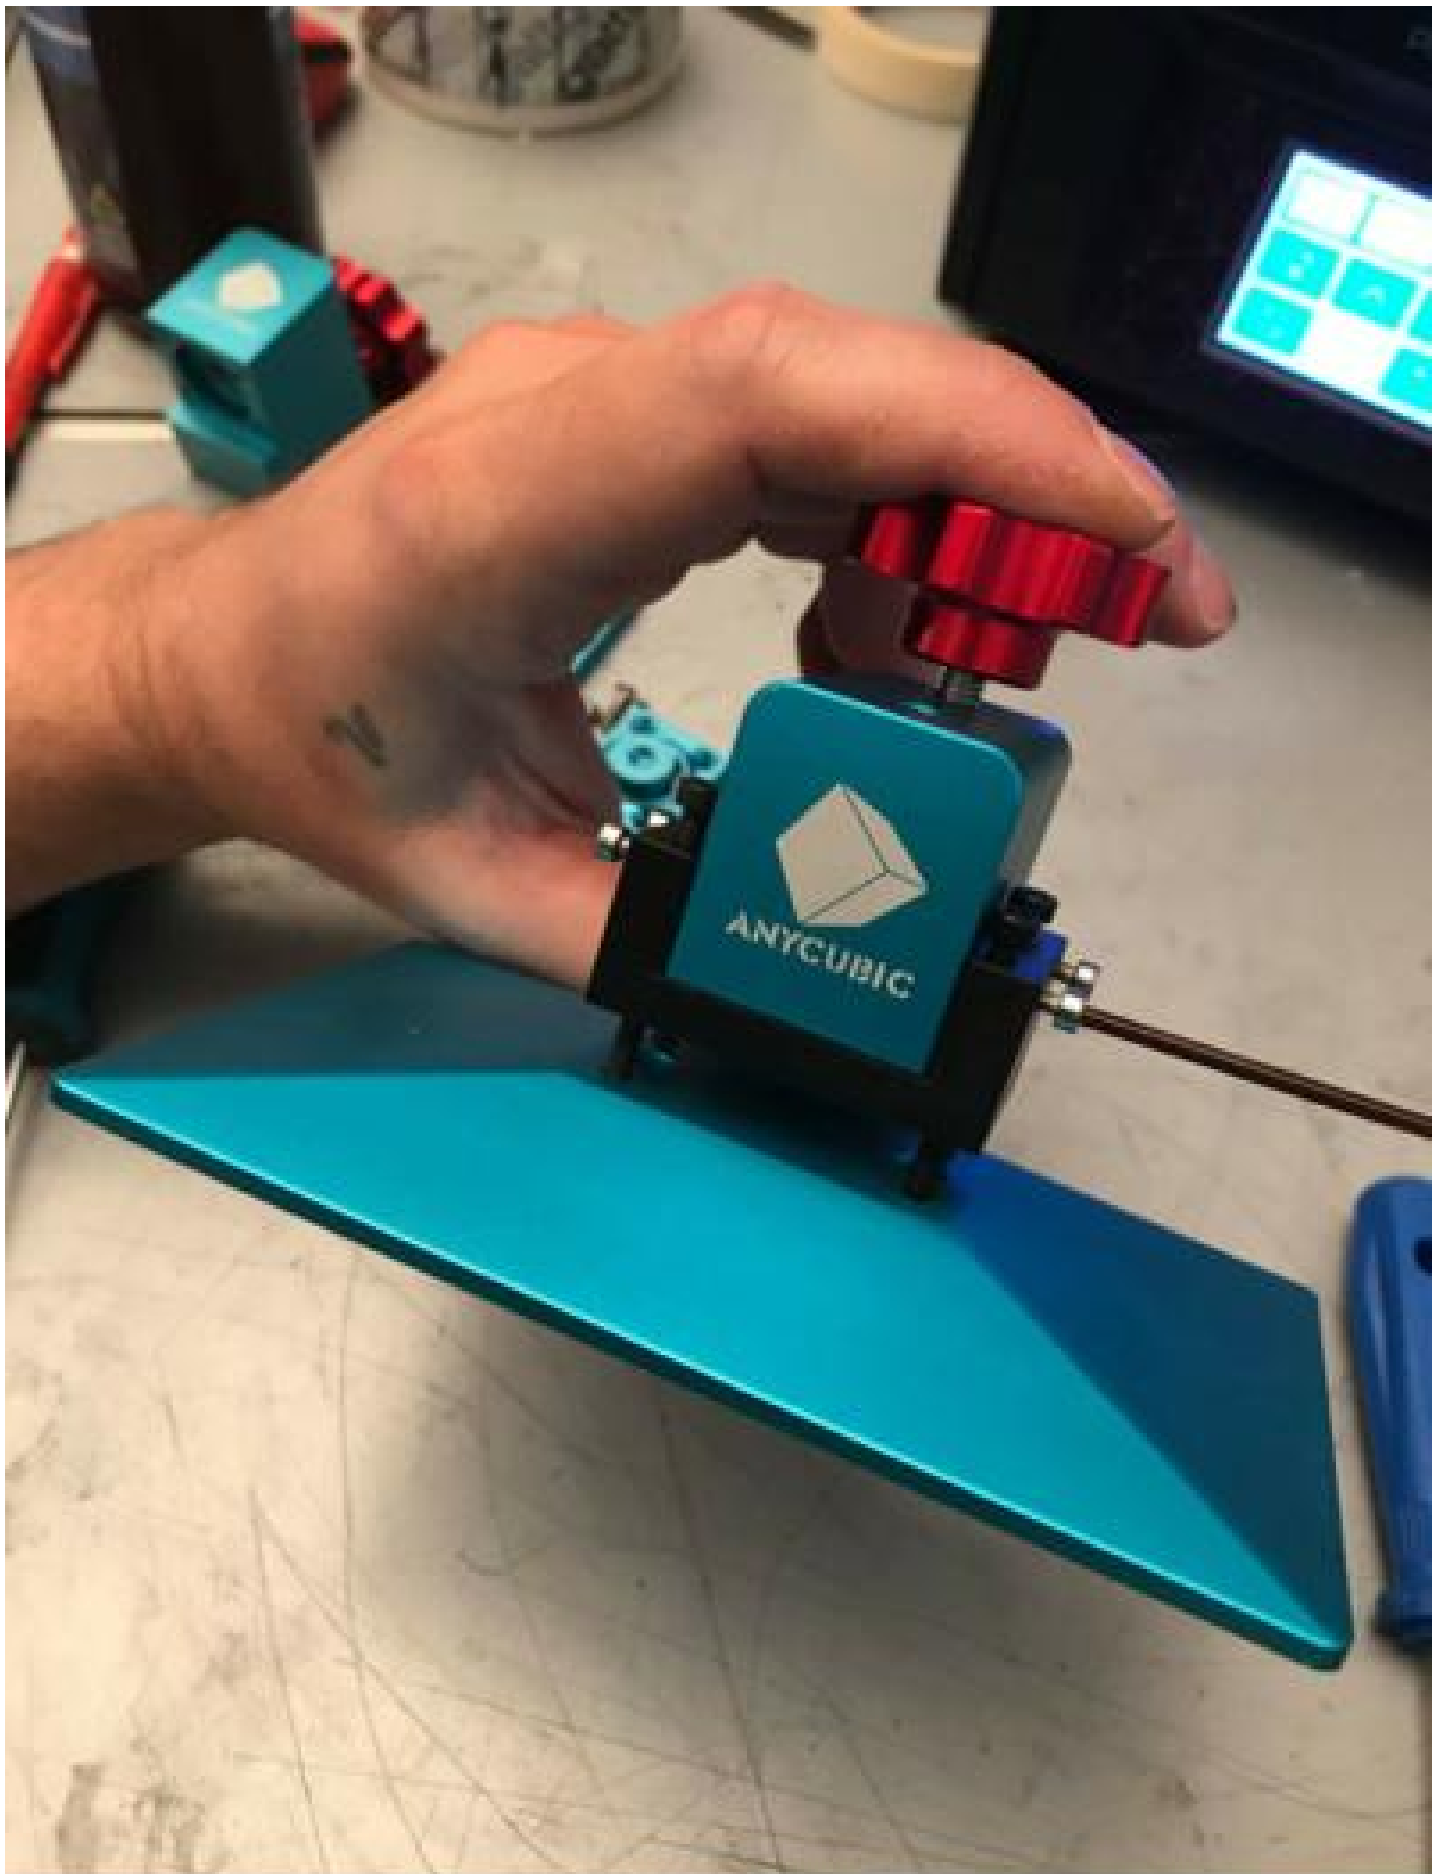

Move platform up, remove, PAY ATTENTION not to move setting done and thight side screws